
 





 
 
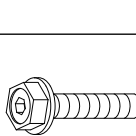
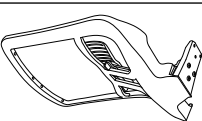
 

 





ASSEMBLY INSTRUCTIONS


PRODUCT NO.: RS-511GFBL / RS-511GFCH

Part List			
Key	Description	Qty.	Part
A	CASTERS	5	
B	BASE	1	
C	SEAT CUSHION	1	
D	RIGHT ARMREST	1	
E	LEFT ARMREST	1	
F	ARMREST SCREWS D 1/4" x L 1-3/8"	6	
G	FLAT WASHERS	10	
H	MECHANISM	1	
I	FRONT MECHANISM SCREWS D 1/4" x L 1-1/2"	2	
J	REAR MECHANISM SCREWS D 1/4" x L 7/8"	2	
K	BACKREST	1	
L	BACKREST SCREWS D M10 x L 5/8"	3	
M	ALLEN WRENCH	1	
N	GAS LIFT	1	


Step 1
Turn Base "B" upside down.
Insert Casters "A" into Base "B".

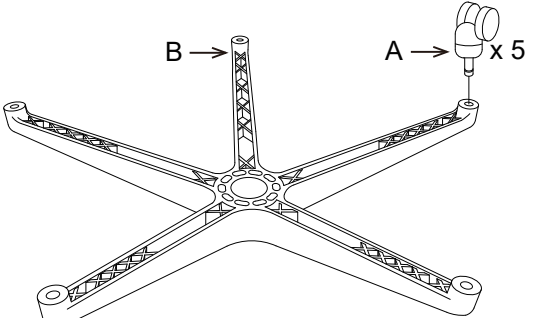


Step 2
Attach Right Armrest "D" to Seat Cushion "C" with Armrest Screws "F" and Flat Washers "G".
Repeat for Left Armrest "E". NOTE: Arrows on armrests point to front of seat cushion and fully tighten all screws.

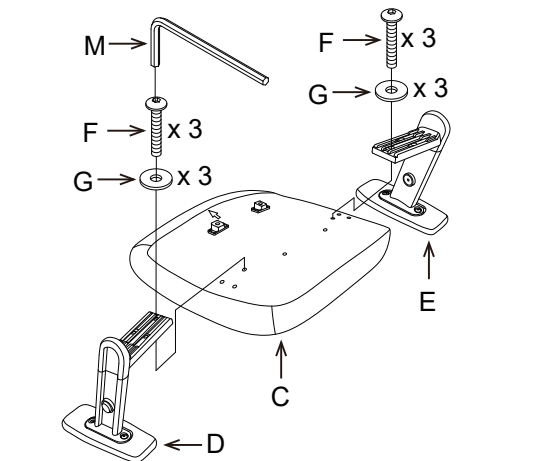


Step 3
Attach Mechanism "H" to Seat Cushion "C" with Front Mechanism Screws "I", Rear Mechanism Screws "J" and Flat Washers "G". NOTE: Fully tighten all screws.

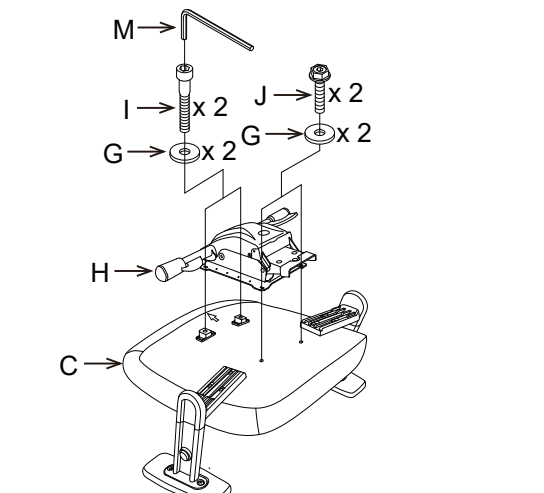


Step 4
Attach Backrest "K" to the rear of Mechanism "H" with Backrest Screws "L".
NOTE: Fully tighten all screws.

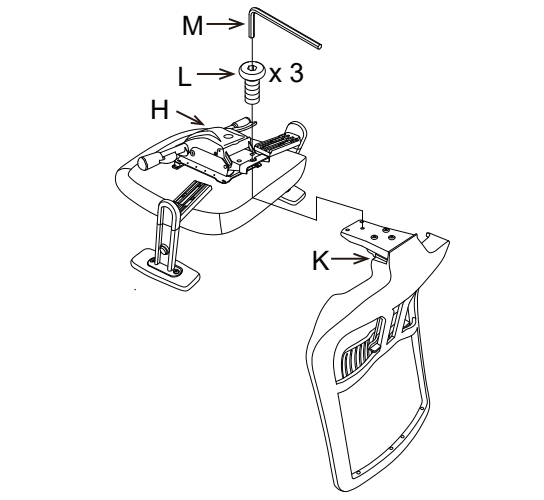


Step 5
Insert Gas Lift "N" into hole on Base "B".

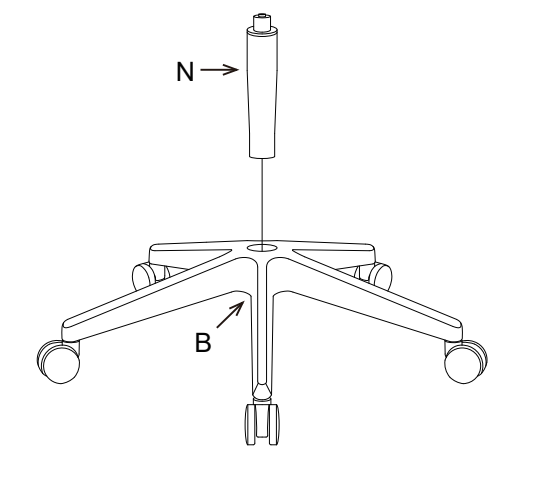

Step 6
Place seat assembly onto Gas Lift "N". Push firmly on the chair seat to securely attach seat assembly to seat post.

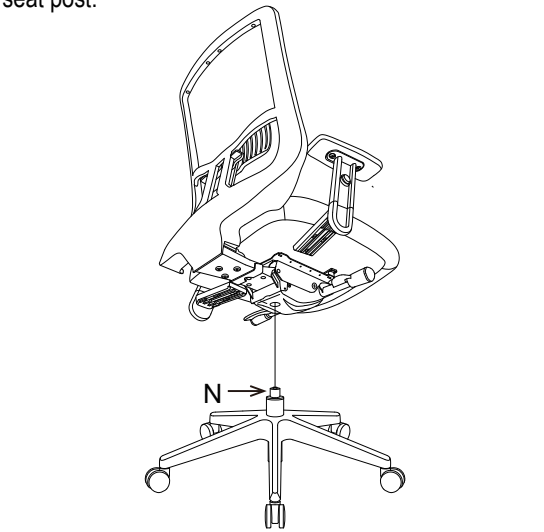

ATTENTION: Make certain that all screws are fully tightened before using chair.
Lubricate all moving parts and tighten all screws every 6 months or as needed.

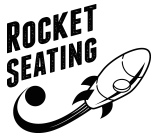

OPERATING INSTRUCTIONS

PRODUCT NO.: RS-511GFBL / RS-511GFCH

● LUMBAR SUPPORT ADJUSTMENT

To adjust lumbar support height, simple pull up or push down the lever to desired position.

● ARM HEIGHT ADJUSTMENT

To adjust arm height, push button (1) in to allow the arms to move up or down freely, release button (1) once the desired height is reached.

● BACK ANGLE ADJUSTMENT

Turn knob (2) clockwise to lock backrest in position. To unlock, turn knob (2) counter-clockwise and lean back on the chair to release the anti-kick back mechanism.

● TILT TENSION


Turn knob (3) clockwise to increase tension and counter-clockwise to decrease or ease the tension.

● SEAT SLIDE ADJUSTMENT

Lift lever (4) up to slide seat forward or backward. Release lever (4) to lock the desired seat position.

● SEAT HEIGHT ADJUSTMENT

To raise seat height, remove pressure from the seat and lift lever (5).
To lower seat height, sit on the chair and lift lever (5).

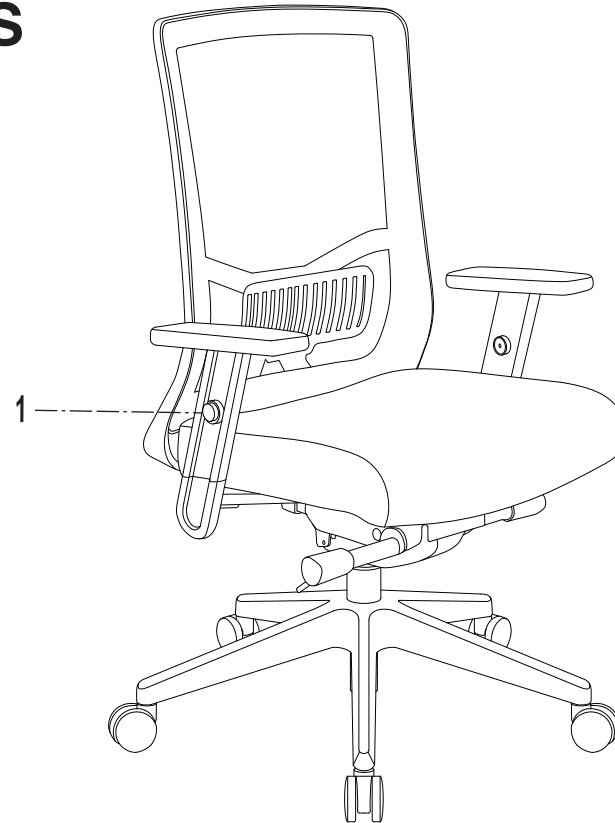

Height Adjustable
Lumbar Support

